

1. Check volume level on AMX touch panel




2. Adjust level or Mute/Unmute if necessary



3. Check volume icon on taskbar



4. Adjust level or Mute/Unmute if necessary

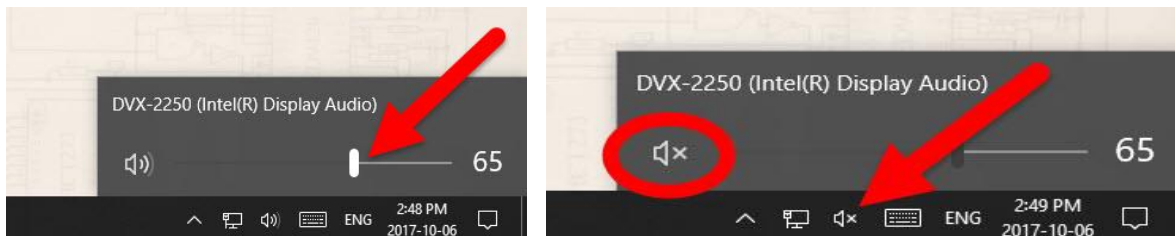

5. Call extension 3815 from phone inside cabinet/podium for further assistance