

1. Check microphone beltpack for power/battery level



2. Try other beltpack if available
3. Check volume level on AMX touch panel



4. Adjust volume level or mute/unmute if necessary



5. Call extension 3815 from phone inside cabinet/podium for further assistance